


7061.0210

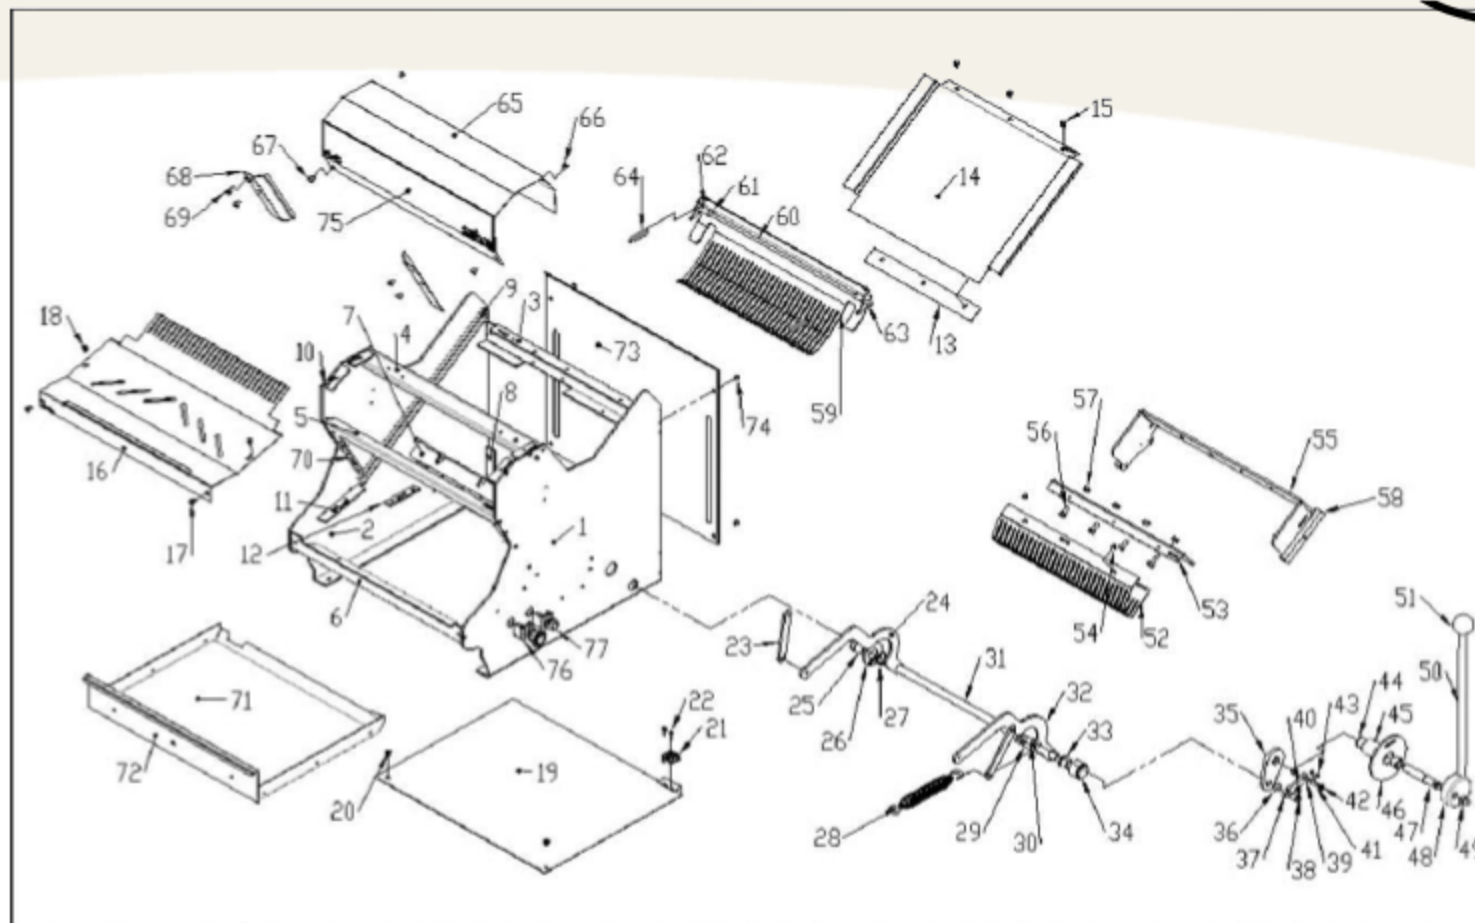

1	Frame Left Side
2	Frame Right Side
3	Rear Bracket
4	Cassette Bracket
5	Front Spring Bracket
6	Front Frame
7	Guide Sheets Leveling Bracket
8	Bottom Bracket
9	Guide
10	Front Cover Bracket
11	Front Stainless Steel Cover Bracket
12	Housing Bracket
13	Stainless Panel Leveling Bracket
14	Rear Stainless Steel Cover
16	Front Stainless Steel Cover
17	Screw
18	Screw



28	Spring
29	Spring Tension Setting Bracket
30	Screw
31	S Pusher Rod
32	S Pusher
33	Drive Housing
34	S Pusher Housing

55	Bread Pusher
56	Nut
57	Screw
58	Plastic Guide
59	Pressure Plate
60	Pressure Plate Housing Rod
61	Pressure Plate Housing Plastic

7061.0210



19	Bottom Cover
20	Screw
21	Microswitch Bracket for Crump Tray
22	Microswitch for Crump Tray
23	Bread Pusher Rod
24	S Pusher
25	Plastic Housing
26	Reinforcement Bracket
27	Circlip

35	Eccentric
36	Eccentric Rod
37	Eccentric Rod
38	Circlip
39	Busher
40	Circlip
41	Connection Rod
42	Circlip
43	Busher
44	Busher
45	Housing
46	Reinforcing Plate
47	Arm Rod
48	Arm Housing
49	Nut
50	Arm
51	Handle
52	Bread Pusher Plate
53	Bread Pusher Reinforcing Plate
54	Screw

62	Pressure Plate Housing Metal
63	Pressure Plate Housing Plastic
64	Pressure Plate Spring
65	Up Cover
66	Screw
67	Screw
68	Front Protection Cover
69	Screw
70	Front Protection Cover Bracket
71	Crumb Tray
72	Crumb Tray Handle
73	Back Cover
74	Screw
75	Label
76	Emergency Stop
77	Start Button